





Why plate thickness is not visible in the model while viewing solid view?

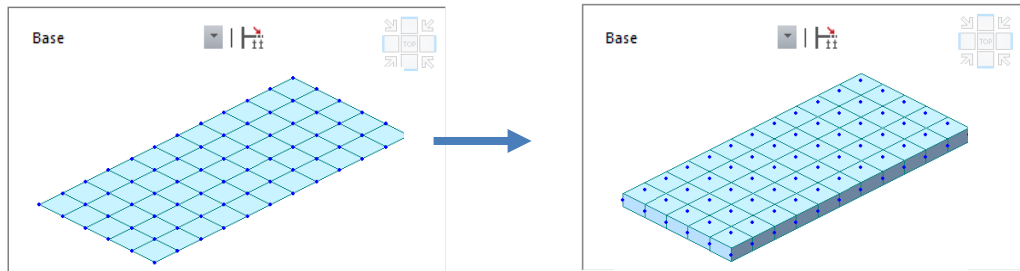

In case the plate thickness is not being displayed after switching off the hidden view, the plate thickness option is not activated.



For viewing the plate thickness, please follow the instructions given below:

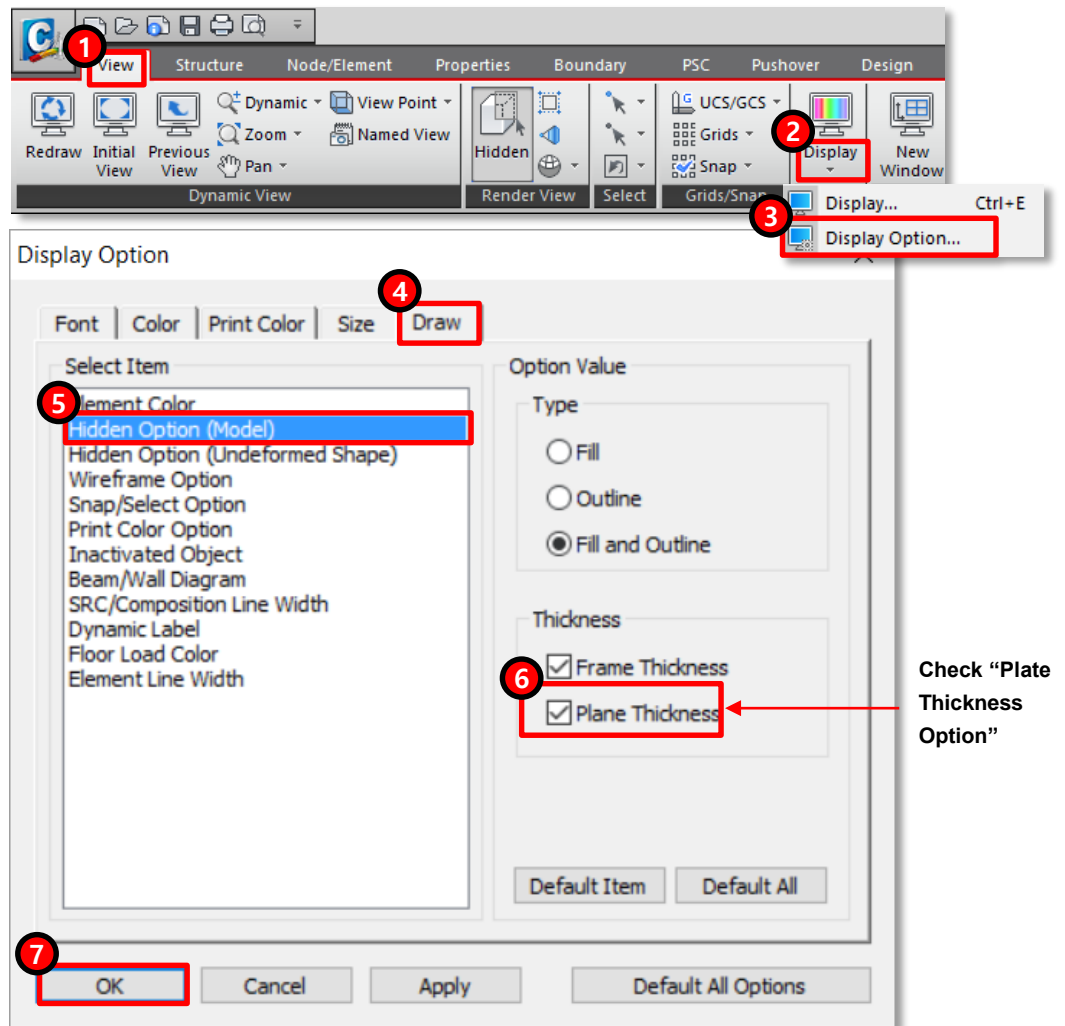

Check "Plate Thickness Option"