


## How to formulate load combinations for construction stage results?



By default, the results of last construction stage will be available in Load combinations in post-construction mode after completion of analysis.

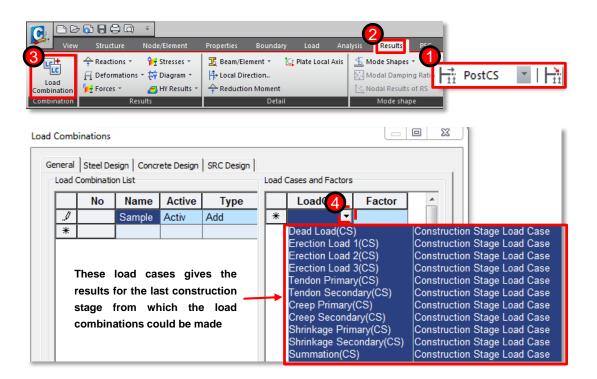

If one wants to extract results for construction stages other than last construction stage, then post-construction mode should be changed to that particular construction stage and then goto Results  $\rightarrow$  Results Tables  $\rightarrow$  Beam  $\rightarrow$  Force...



