

## To Minimize Data use with Durite Live

1. Only use remotely to download essential footage as constantly viewing Vehicles will use the data allowance up and may cause vehicle or fleet to be blocked and additional charges to unblock.
2. Narrow time down as close as possible eg 2-5 min before and after event needed. This can be done using playback feature if you are given a window of 1hr to search (Playback using as few as cameras as possible to narrow time frame down), See Our [Durite Live Playback guide](#).  
  
eg. If incident at front of vehicle select front camera only. Now you can try and find when the incident happened and then select 2 min before and after to download footage so you can see the run up to incident. To download footage, See our [Durite Live Download footage guide](#).
3. If Possible and you have access to the Vehicle/HDD and PC Use the 0-876-33 HDD Reader. That way you will not be using Data allowance to get footage from DVR. Or Via USB stick and export data from the DVR HDD to the USB Stick to review and get footage at a convenient time after.  
See Guides [Access Footage on DX1 DVR](#) Or [Export to USB from DX and DL DVR](#).
4. In Durite Live settings set to automatically turn off video feeds after 60 seconds. As Per below image. Open system settings at top right of screen then adjust video turn off time then press OK button at bottom of screen.

