


DL1 Checking 4G Connection and Signal Strength


1. Log in to the Main Menu.

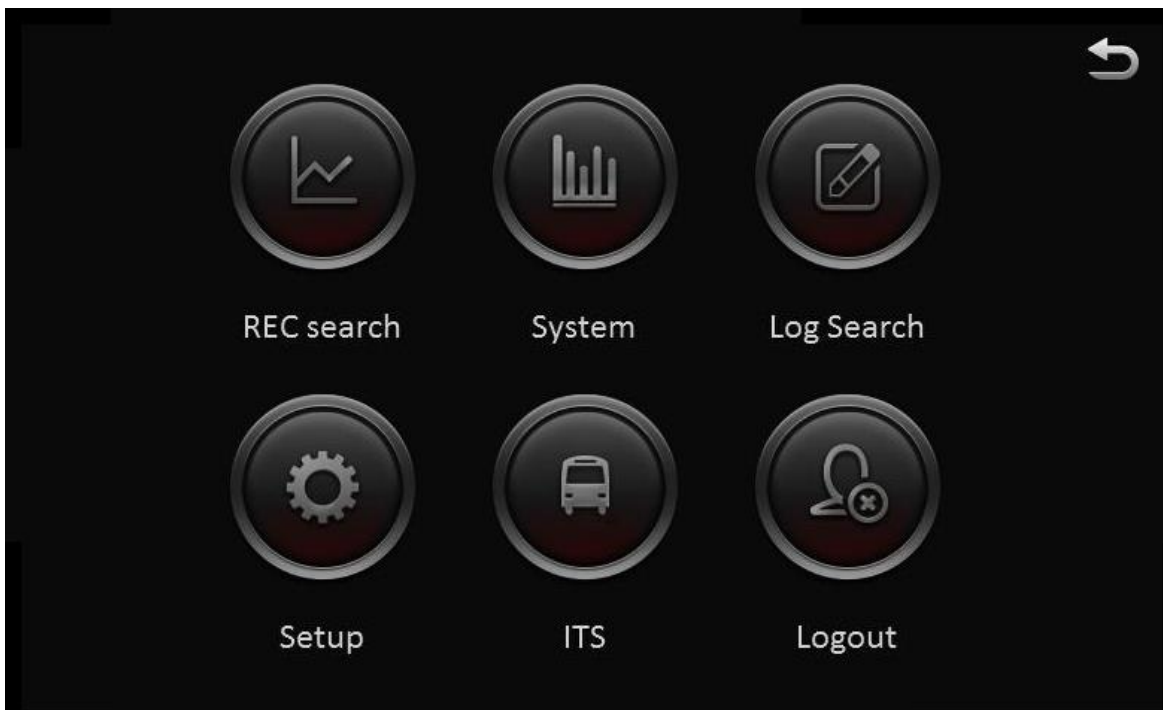


2. Once in the main menu select system



3. From the System page under version info you will see the internal serial number this is used to connect the device to Durite Live.

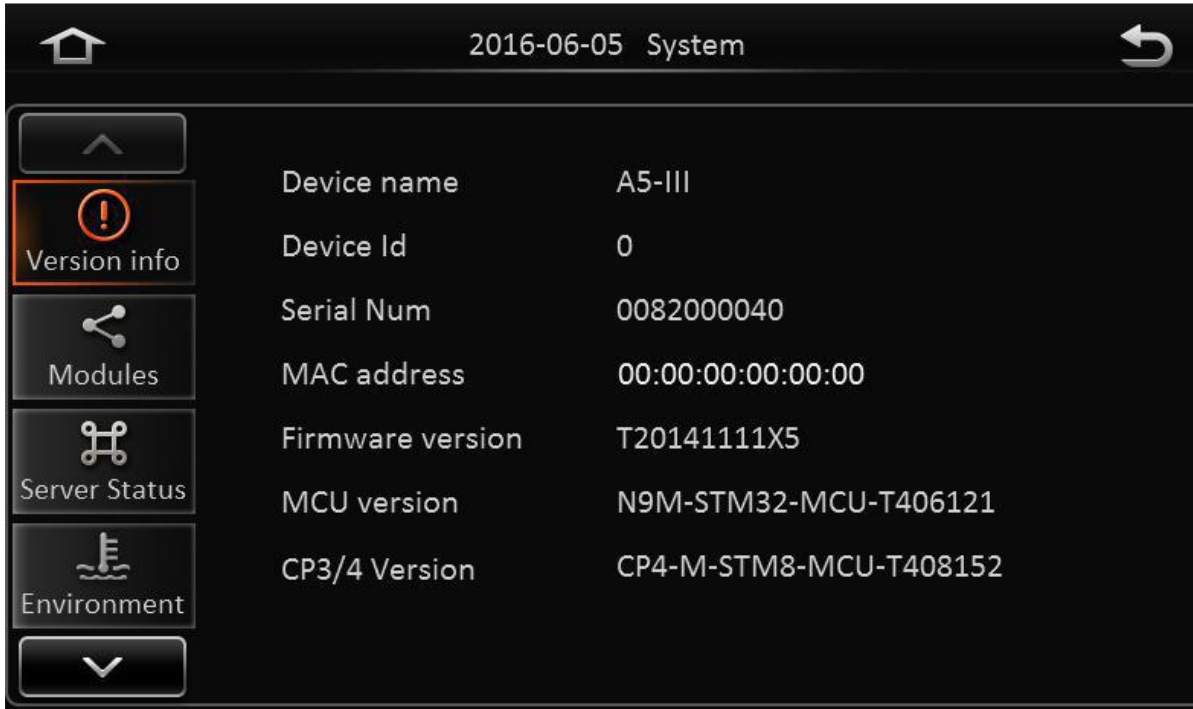

4. To check the Connection and Signal strength, Select Modules from the side bar. On this page it will show Sim status and signal strength.

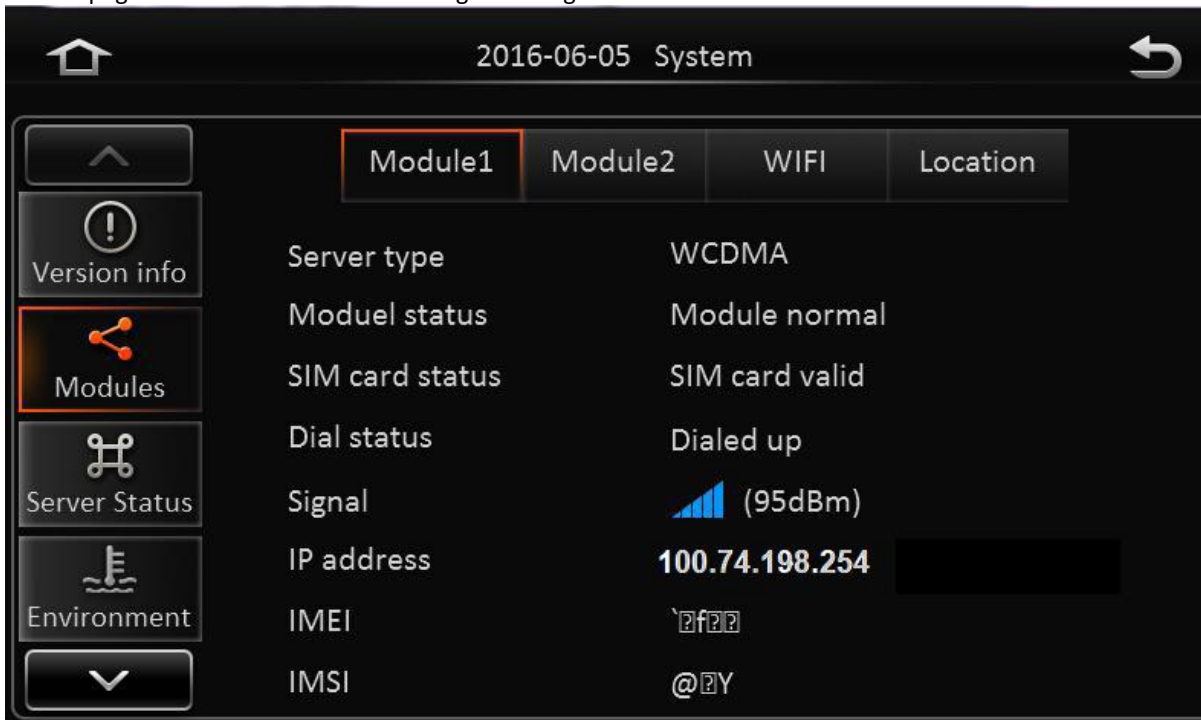

5.Under Server Status you can see it the device is connected to Durite Live servers.

