


DX / DL1 Initial Set up on Installation

Press Set up on the Remote then Log in to the menu, Username is admin, Password is eagle then press Login.

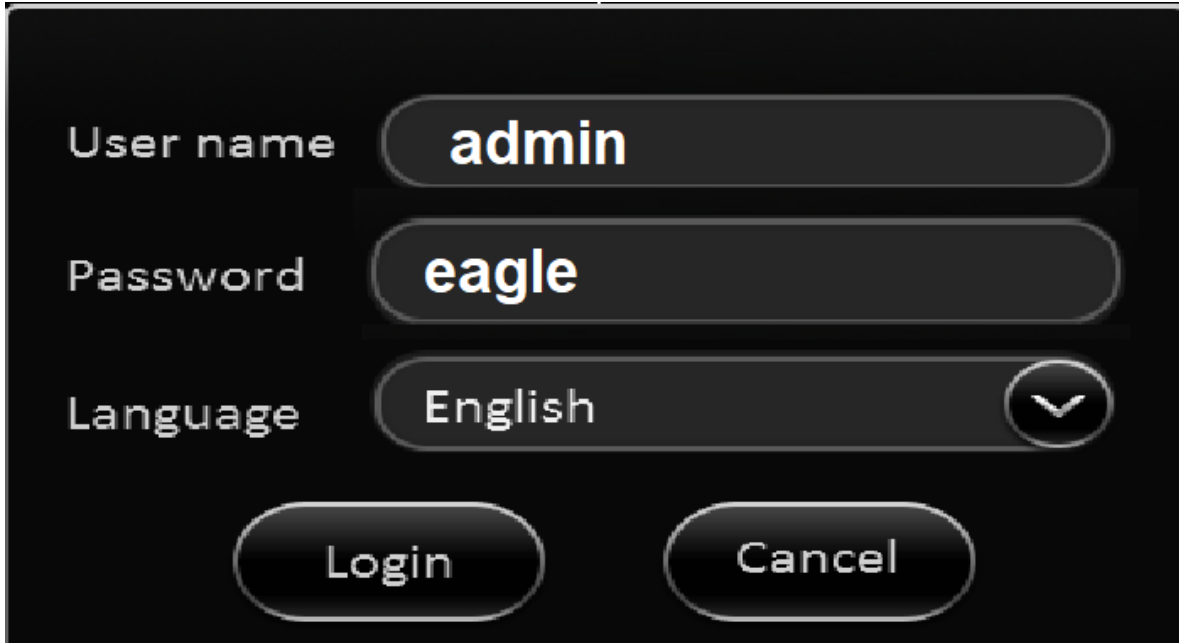


Here you will see the main menu interface. Now select the Setup Menu.




Now you can enter the Vehicle Registration Number in Vehicle Plate (enter without spaces), then Save.



Now enter Time setup Menu from the side bar and set correct time setting for the DVR then save.

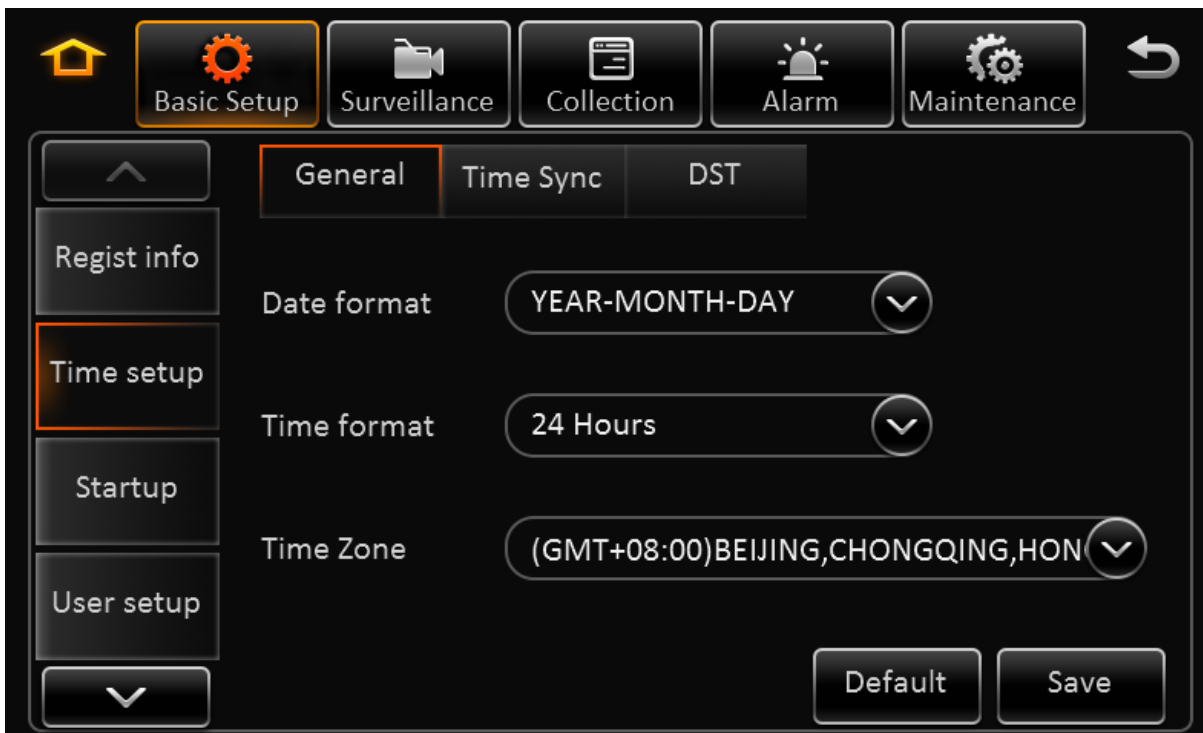

Now enter Startup Menu here you can change the ignition delay time. Default is 5 minutes so the DVR will stay on for 5 minutes after the ignition is switched off. Once correct delay has been entered press save.

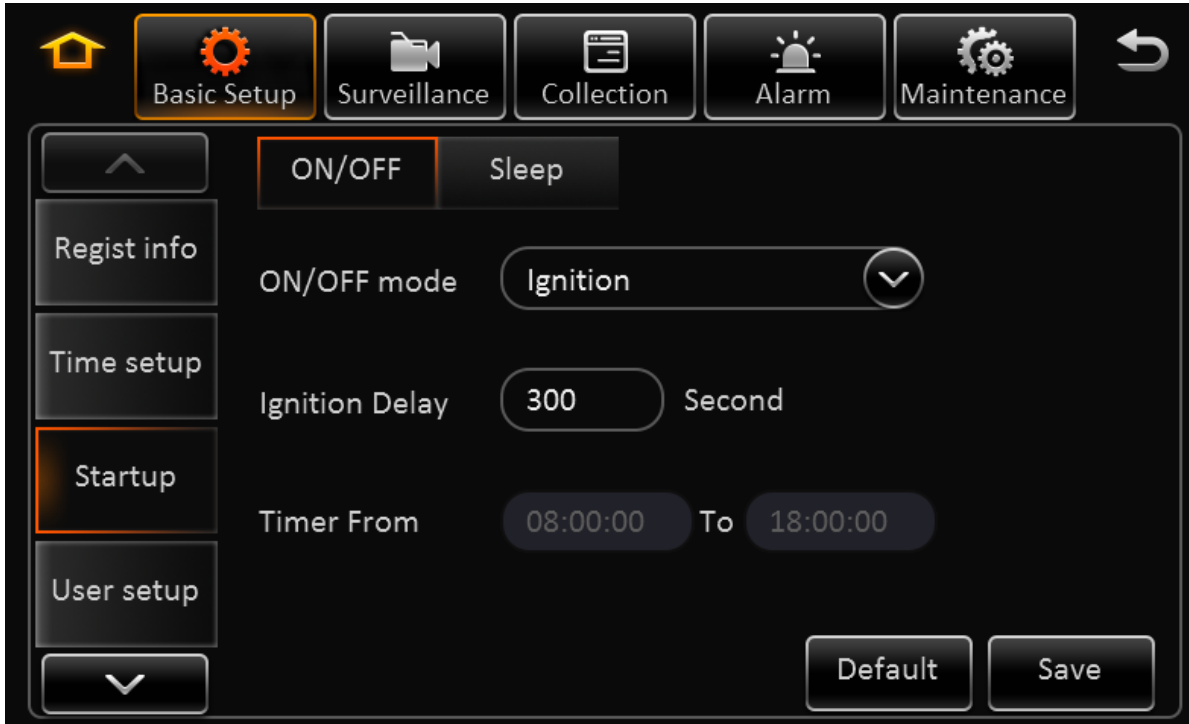

All other settings have been pre-configured as below.

- Camera 1 Left side
- Camera 2 Right side
- Camera 3 Rear
- Camera 4 Front or In Cab
- Camera 5 Front IP camera

- Trigger cables
- Sensor in 1 Left indicator
- Sensor in 2 Right Indicator
- Sensor in 3 Reverse