



How to Run DVR with monitor off until triggered by indicator or reverse


Enter main Menu then Select Setup

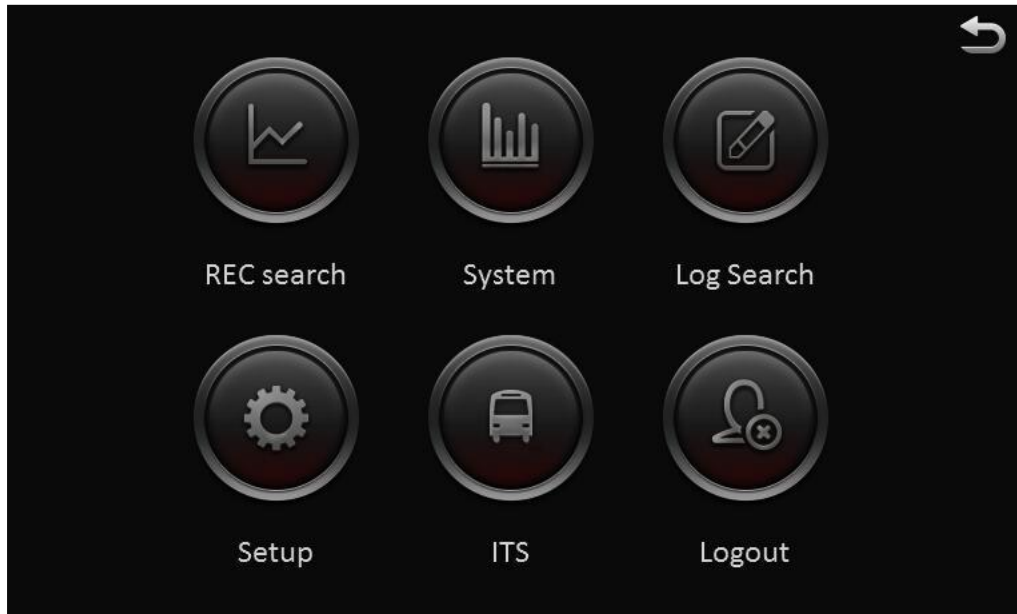

From the Setup menu Select Alarm Manu from the Top Bar then IO alarm. These should be named Left, Right & Reverse and should all be enabled Now you will need to enter the Linkage Setup for each of these

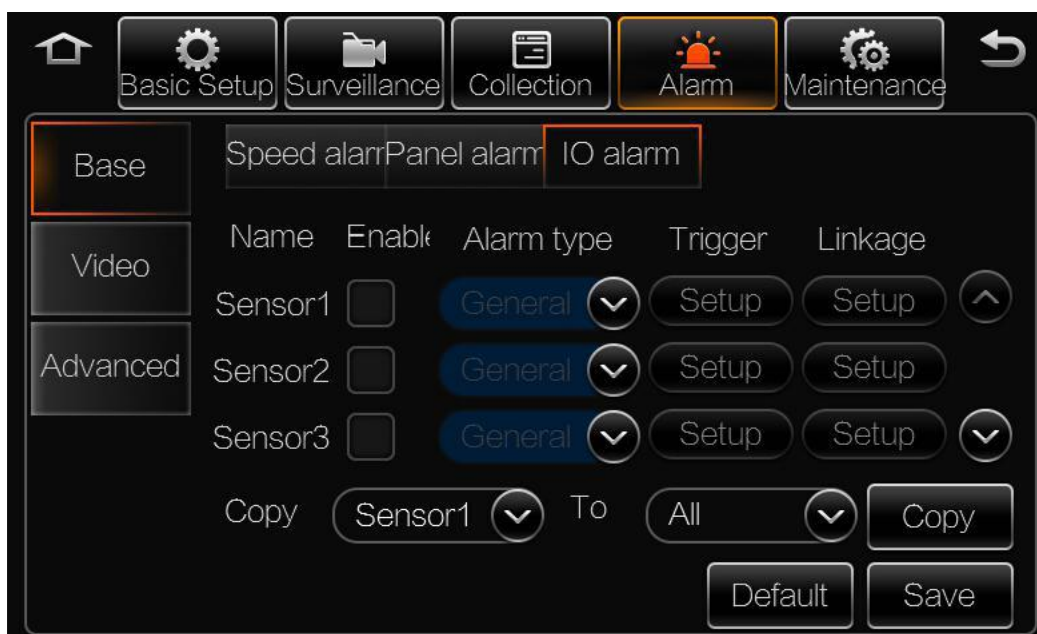

In the Alarm Linkage page you will need to enable Linkage IO output 1 (should be ticked in the box) then do the same for each IO alarm setting do not adjust any other settings on this page

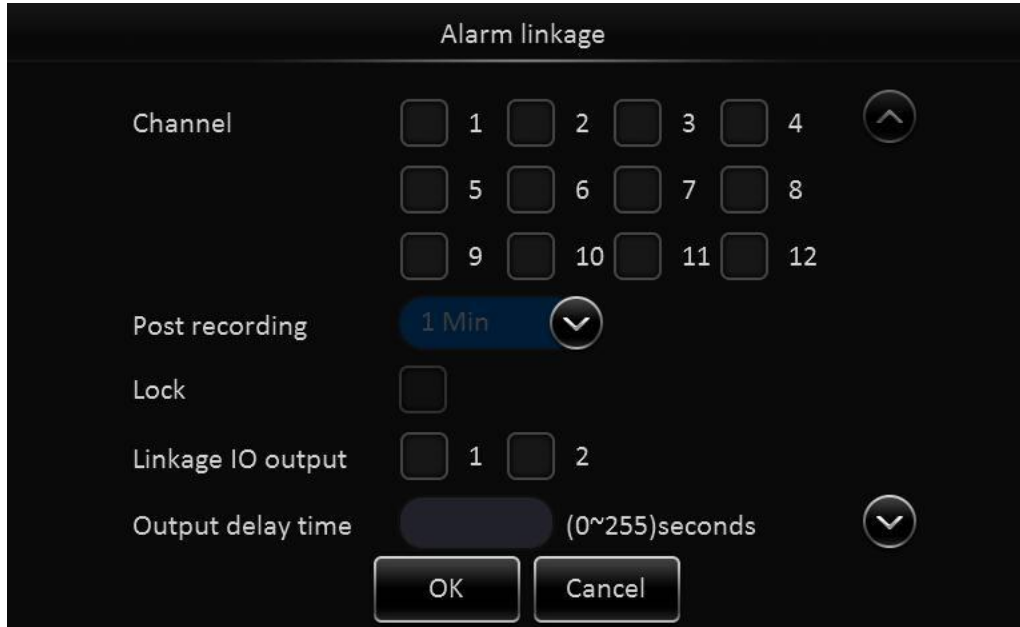

Now when the DVR receives trigger from Indicators or reverse it will give a voltage output on the Sensor out 1 (Red & White) Cable which will be connected to the Monitor Trigger wire for the feed that has DVR output going to ie CAM1 use Cam 1 Trigger

Now when in the vehicle you will need to press the monitor power button so the screen goes off then when you indicate or reverse the monitor should come on for a short time until the trigger stops.