


How to Playback Footage from HDD on DX / DL units

ACCESSING MENU:

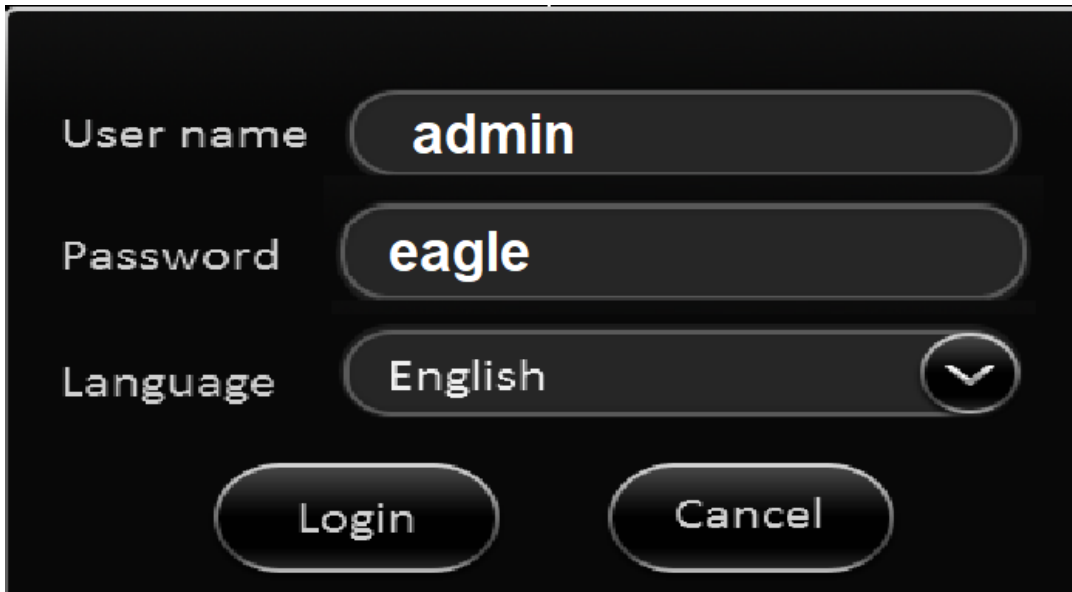

A login screen with a black background and white text. It features three input fields: 'User name' with the value 'admin', 'Password' with the value 'eagle', and 'Language' with a dropdown menu showing 'English'. Below the fields are two buttons: 'Login' and 'Cancel'.

Enter Record Search Menu



RECORD SEARCH: Select Date to access footage.



Video search interface contains video file search, video data backup and video playback function.

When there is a hard disk or SD card, enter the video search interface. Following is the REC Search interface:

In the calendar, the colour below the dates means:

- a. **No colour** means no video.
- b. **Green** means common video.
- c. **Red** means alarm video.
- d. **Yellow** means there are alarm's and the video files are automatically locked (lock video).


Source: select the source of the video, there are main video, subvideo and mirror video.

The main record means HDD record while sub record and mirror record are dual-stream records.

Select Channels to View



Select the date with record, click next, and then enter the following interface:
Following are the search options and search result interface:

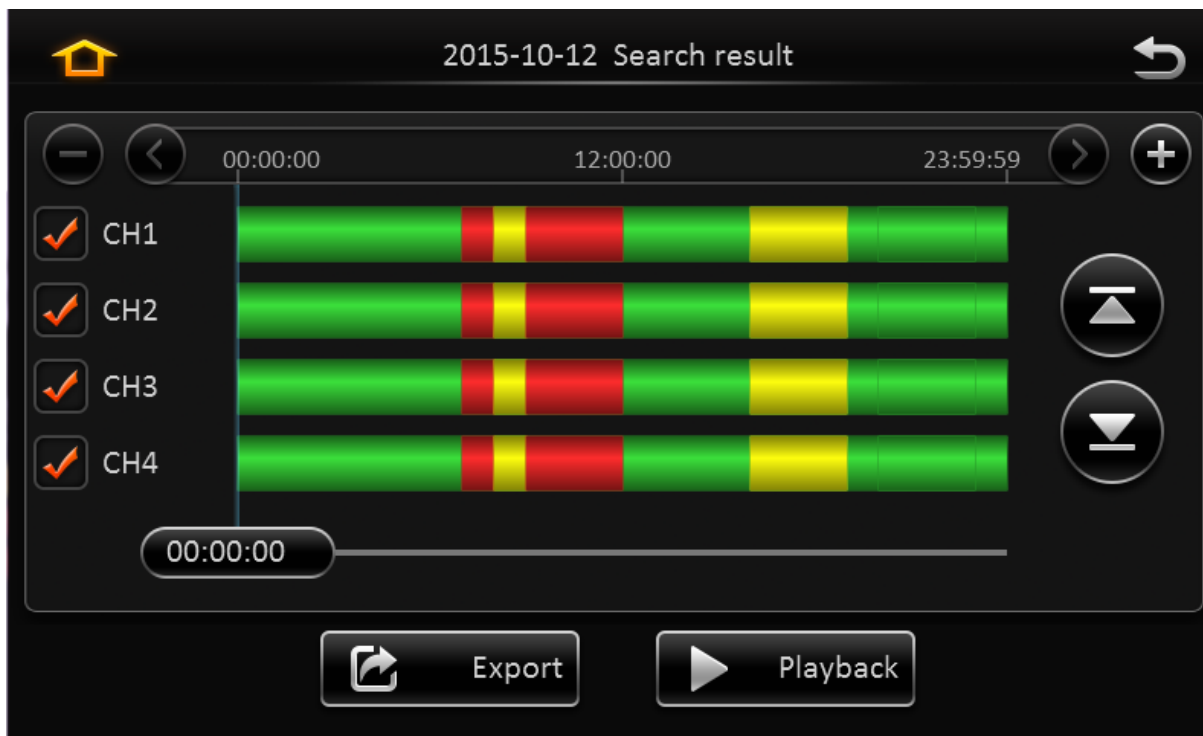

Video type: User can choose all record, alarm record or normal record.

Channel: The channel is optional and mark with colour that has record. The channel with grey cannot be chosen if there is no record. As to different record type, it will show different relates.

Click search button in the record search detail page, user can enter then record search result page.

Time Bar: Time bar shows three time points, 0 o'clock, 12 o'clock, 24 o'clock. It shows what type of videos during the time according to the marked channel.

Channel No: According to the situation of video for each channel video the day, the video will be displayed on the timeline. Tick the channel if user wants to playback the video.

Note: channel number is displayed from 1~5, please up page up/page down button to change channel.

Button description

Video playback: Choose the channel No., select start time to play < default start from 0 >, Click the playback button to playback the video.



In the playback interface, the user can choose fast forward or fast backward to play the video, the button in the middle of screen can switch the channels. The image stops and it will not exit automatically when playing to the last video of the day.

Time period settings: Click the time setting button, select start time and end time, it will back up or playback the video in the selected time period. Click the Play Button to view footage.