

Setting up additional Alarm Triggers

Enter DVR Menu by pressing Set up on remote


User name: admin

Password: eagle

To enter the main menu screen as below



Then Using the arrows select Setup menu as per image below

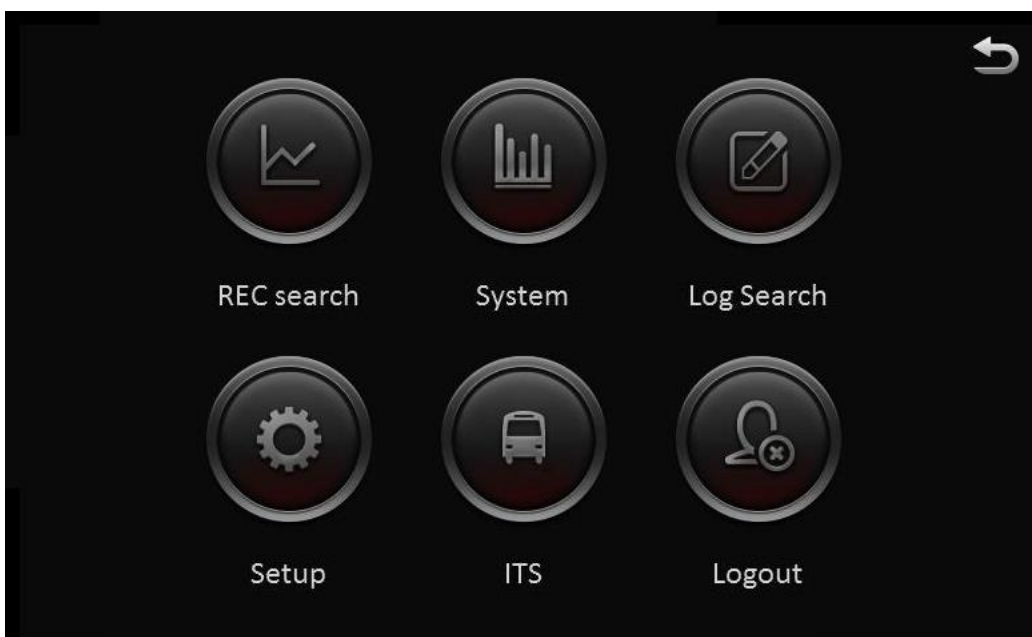

Alarm – Base


Now Select Alarm from the Top Bar.
Then IO alarm.

Here you can enable additional alarms if needed Default settings Sensors 1,2 & 3 are enabled.


1 is Left enabled Event (Trigger is set to left steering) Linkage is set to Channel 1.

2 is Right enabled Event (Trigger is set to right steering) Linkage is set to Channel 2.

3 is Rear enabled Event (Trigger is set to astern) Linkage is set to Channel 3.

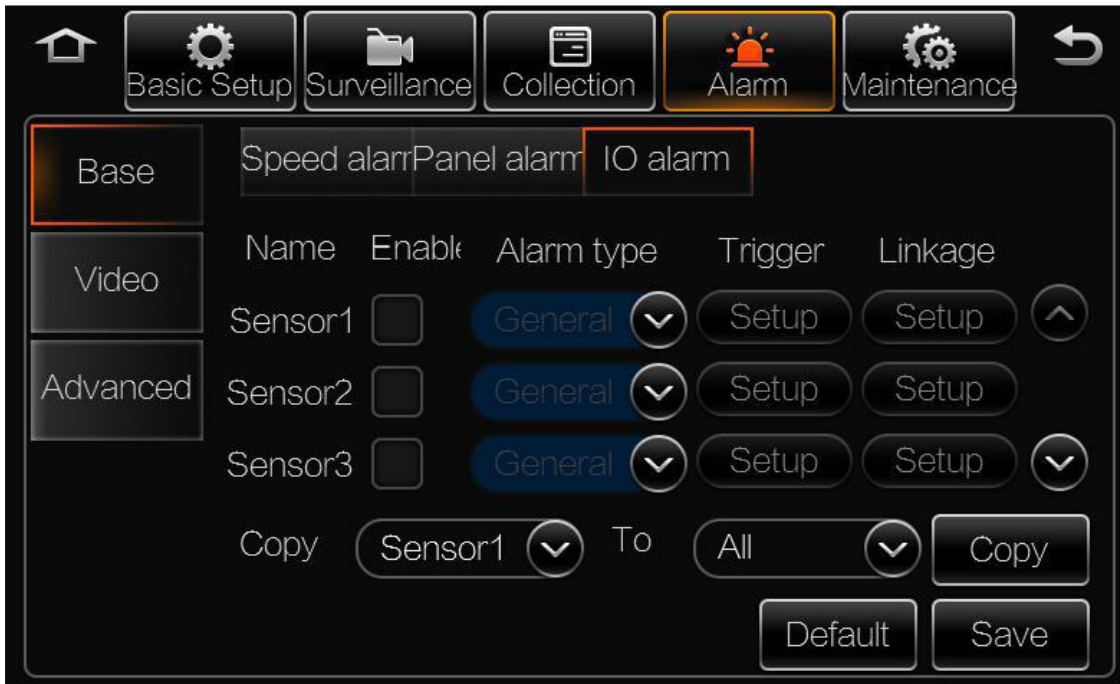

Alarm- linkage (page 1)

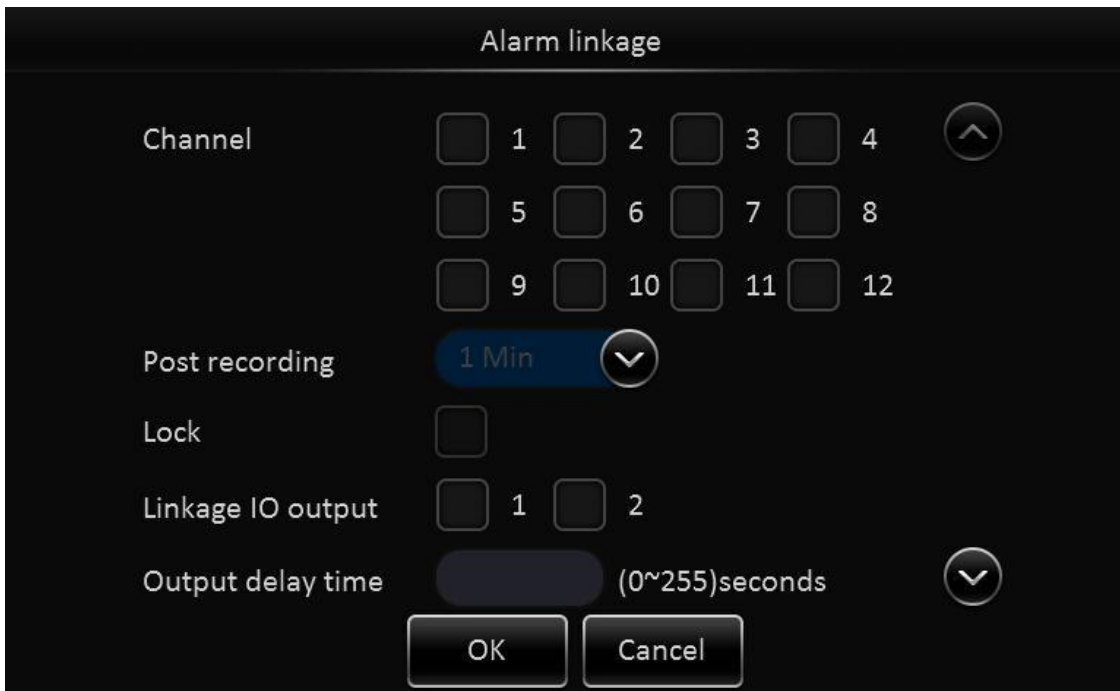

Alarm- linkage (page 2)

Channel. When alarm trigger, which channels need to record, the chosen channels will show alarm info.

Post recording. It is for user to config how long MDVR need to record after alarm cancelled.

Lock. User can set whether to lock the alarm files (Usually not set as uses HDD storage up).

Linkage IO output. The alarm cable has 2 outputs which can be connected to an external buzzer here you can select which output is used for the alarm to activate from.