


PSS Triggers Not Responding

Login via web browser.


Go to:

Collection then set up as below image

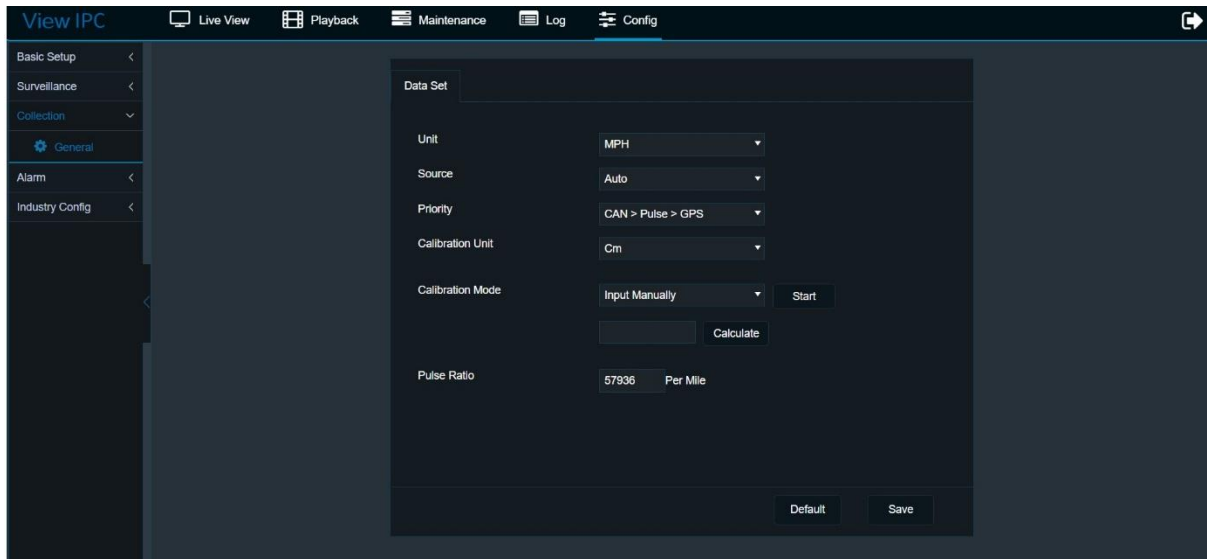


Alarm

Base settings set as below image

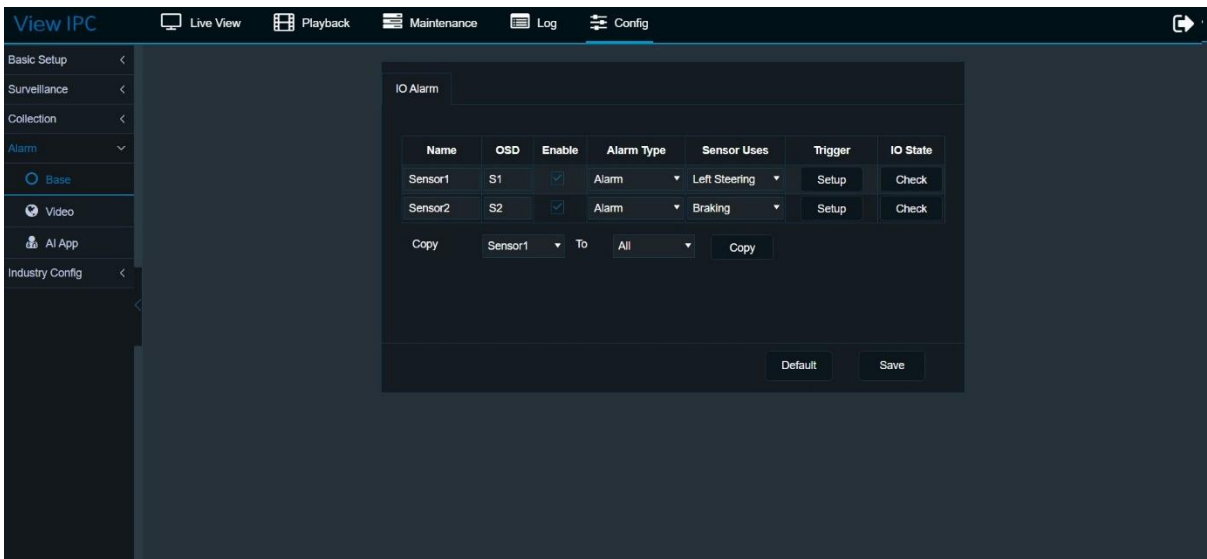

Then in AI App Select Algorithm Calibration set as below image in
RBSD should **NOT** be enabled.
LBSD should be set to **enabled**.
FBSD should be set to **enabled**.

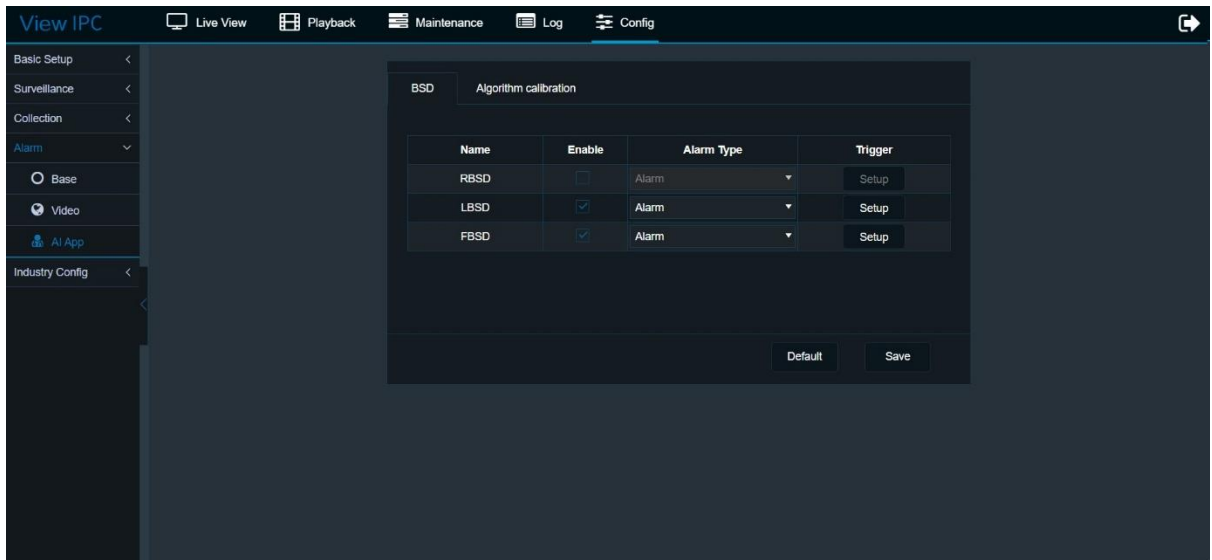


In the next box along under Alarm TYPE.

LBSD – Should be set to **Alarm**.


FBSD – Should be set to **Alarm**.

In the Setup box:


LBSD – Trigger setting time should be set to **0 – 30**.

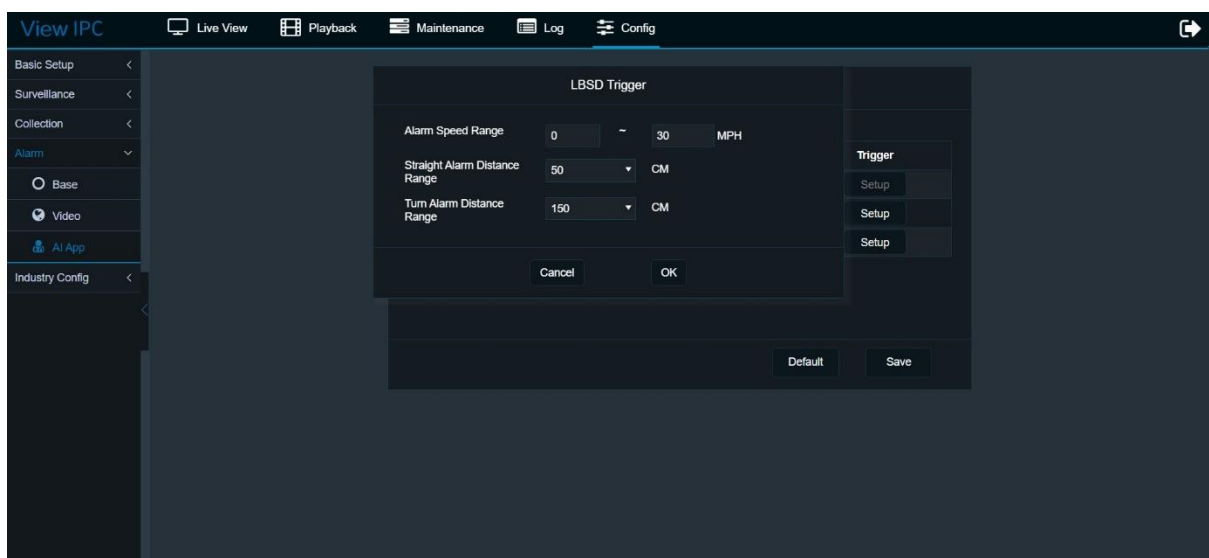

FBSD – Trigger setting time should be set to **0 – 20**.

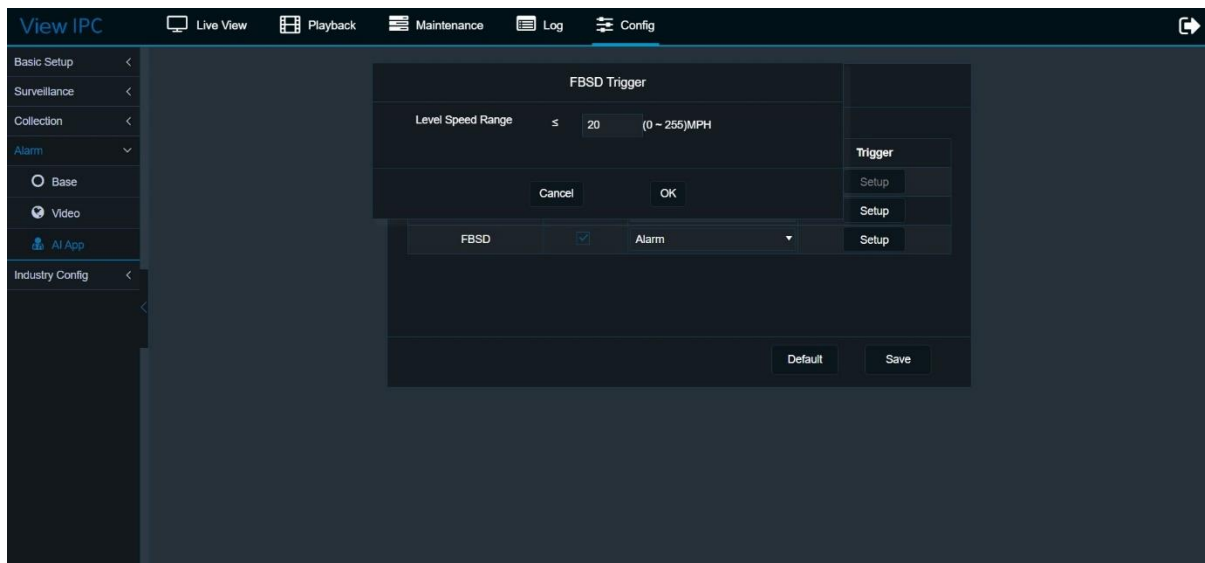

Back on the left-hand side of the GUI you'll see a tab called **INDUSTRY CONFIG**.
Under **Alarm Config**, should be set as below image

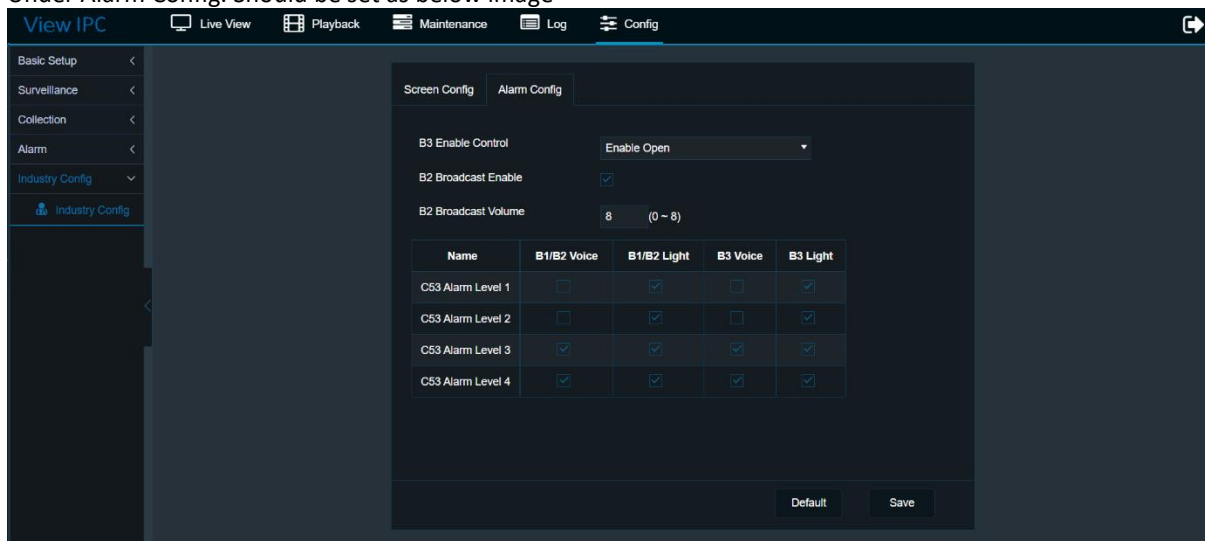

B3 enable control should be set to: **ENABLED OPEN**.

The tick boxes should be as follows:

Alarm levels	B1/B2 Voice	B1/B2 Light	B3 Voice	B3 Light
1	X	✓	X	✓
2	X	✓	X	✓
3	✓	✓	✓	✓
4	✓	✓	✓	✓